



# Wander Management

Customizable solutions for all of your needs

The **DoorGUARDIAN® wander management** solution allows facilities to **protect wander prone residents and control access** while maintaining a professional and respectful environment throughout.

With a long list of capabilities available, DoorGUARDIAN® system functionality and deployment is **customized for each client's unique needs and infrastructure requirements.**



## Universal Exit Panel System Features & Operation

- Allows for normal traffic flow
- Alarms and locks door when a monitored resident attempts to exit
- User-programmable escort codes
- Non-volatile memory safe from power failure
- Program to lock/unlock at specified times
- Delayed Egress technology complies with NFPA Life Safety Code 101
- Emergency battery backup
- Interfaces with a variety of dry contact-driven devices such as magnetic locks, nurse call, pagers, CCTV, Secure Care Products' notification consoles, fire alarm systems, elevators
- Access Control available on both ID & non-ID systems



**Proven capabilities designed to perform in demanding environments:**

- Emergency Departments**
- Isolation/Quarantine Areas**
- Psychiatric Facilities**
- Rehabilitation Centers**
- Senior Living/Long-Term Care Facilities**
- Dementia Care Units**
- Other Clinical Applications**






## ID and non-ID System Features

- Battery backup on all panels ensures no programming memory loss in the event of a power failure
- Exit panel LED indicators are exceptionally bright and feature symbols to avoid language specific instructions
- Exit panels and mounting boxes can be flush or surface-mounted on walls and are made of impact resistant plastic designed to last for years
- Unobtrusive and light weight, easy to sanitize transmitters
- Customizable programming allows tailored operation of a single door or entire facility to meet your needs and local code requirements
- NFPA 10 Life Safety Code compliant when installed with Secure Care Products listed components and cabling



## ID System Software Features

- Quick, straightforward, and easy to use
- Near real-time status
- Virtual environment supported
- Clear visual display of floor plans and exits
- Simple resident transfer
- Multiple-floor monitoring capabilities
- Displays detailed alarm and alert information including:
  - Transmitter ID
  - Resident photo
  - Resident name
  - Event location
  - Room number
- Quick report generation including alarm/alert histories, resident activity logs, staff response times, expired transmitter list, transmitter re-order information

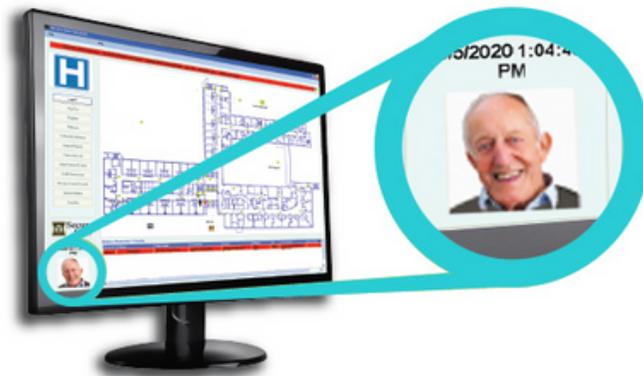

## Secure Care Products

*Helping you enhance the safety of your patients and residents with our line of selective monitoring solutions*